

12.17 Fault Code Table

No.	Pcode	Description(UAES)
1	P0602	Control Module Programming Error
2	P0030	O2 Sensor 1 Heater Contr. Circ. Open
3	P0031	O2 Sensor 1 Heater Contr. Circ. Low
4	P0032	O2 Sensor 1 Heater Contr. Circ. High
5	P0107	Manifold Abs.Pressure or Bar.Pressure Low Input
6	P0108	Manifold Abs.Pressure or Bar.Pressure High Input
7	P0112	Intake Air Temp.Circ. Low Input
8	P0113	Intake Air Temp.Circ. High Input
9	P0117	Engine Coolant Temp.Circ. Low Input
10	P0118	Engine Coolant Temp.Circ. High Input
11	P0122	Throttle Pos.Sensor Circ. Low Input
12	P0123	Throttle Pos.Sensor Circ. High Input
13	P0130	O2 Sensor Circ.,Bank1-Sensor1 Malfunction
14	P0131	O2 Sensor Circ.,Bank1-Sensor1 low Voltage
15	P0132	O2 Sensor Circ.,Bank1-Sensor1 High Voltage
16	P0134	O2 Sensor Circ.,Bank1-Sensor1 No Activity Detected
17	P0201	Cylinder 1- Injector Circuit
18	P0261	Cylinder 1- Injector Circuit Low
19	P0262	Cylinder 1- Injector Circuit High
20	P0501	Vehicle Speed No Sensor
21	P0511	Idle Air Control Circuit
22	P0560	System Voltage Malfunction
23	P0562	System Voltage Low Voltage
24	P0563	System Voltage High Voltage
25	P0627	Fuel Pump "A" Control Circuit /Open
26	P0261	
27	P0629	Fuel Pump "A" Control Circuit High
28	P0650	Malfunction Indicator Lamp Control Circ.
29	P0691	cooling fan control Circuit Low
30	P0692	cooling fan control Circuit High
31	P0480	cooling fan control Circuit Open
32	P2300	Ignition Coil "A" Primary Control Circuit Low
33	P2303	Ignition Coil "B" Primary Control Circuit Low
34	P0322	Crankshaft position sensor Error
35	P0459	Canister purge value power stag control Circ. High
36	P0458	Canister purge value power stag. control Circ. Low
37	P0444	Canister purge value power stag control Circ. Open
38	P0412	Secondary Air Injection System Switching Valve control Circuit High
39	P0414	Secondary Air Injection System Switching Valve control Circuit Low
40	P0413	Secondary Air Injection System Switching Valve control Circuit Open